




MANUAL DE PARTES HUMIDIFICADOR DnB TIPO L

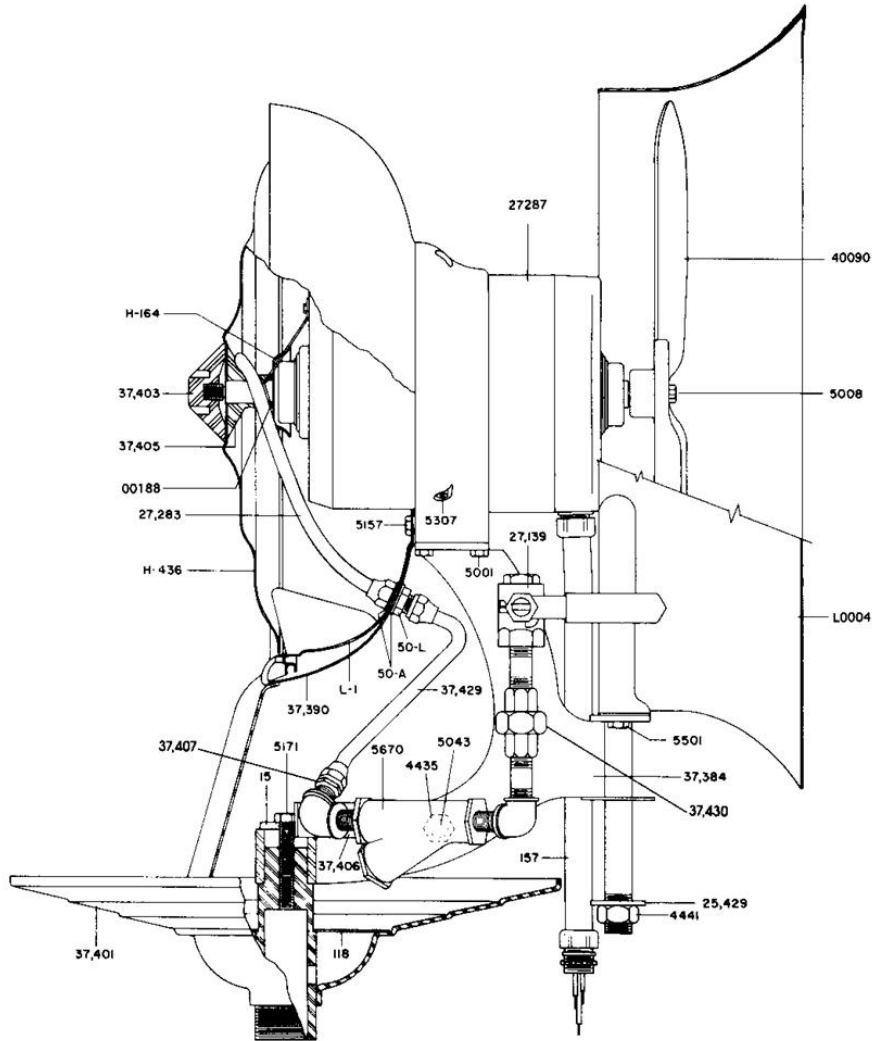

L HUMIDIFIER PARTS LIST

Part No.	Name	Part No.	Name
H-164	Sling Off Washer	5171	Cap Screw
H-436	Disc	5307	Set Screw
L-1	Grid Ring	5501	Cap Screw
L0004	Fan Guard	* 5670	Strainer
L-5	Fan	25,429	Flat Washer
15	Drip Cup Washer	27,139	Valve
50-A	Double Union Washer	27,287	Motor Assembly Specify Voltage
50-L	Double Union Locknut	27,283	Inner Feed Pipe Assembly
118	Drip Pan Strainer	37,384	Stand
157	Flexible Conduit	37,390	Case
188	Motor Shim Washer	37,401	Drip Pan
4435	Hex Nut	37,403	Front Head
4441	Hex Nut	37,405	Back Head
5001	Cap Screw	* 37,406	Bracket
5008	Cap Screw	* 37,407	Single Union
5043	Cap Screw	* 37,429	Outer Feed Pipe
5171	Cap Screw	* 37,430	Orifice Housing Piping Assembly

* component parts in orifice housing piping assembly 37409